



1883776

Queen St. Charles Bed

Parts and Hardware List

A.	Left Headboard Post	1 pc
B.	Right Headboard Post	1 pc
C.	Left Footboard Post	1 pc
D.	Right Footboard Post	1 pc
E.	Metal Assemblies	2 pcs
F.	Side Rails	2 pcs
G.	Support Slats	3 pcs
H.	Leg Supports	4 pcs
I.	Phillips Head Screws	8 pcs
J.	Medium Allen Head Bolts	4 pcs
K.	Allen Head Bolts (M8 x 32)	8 pcs
L.	Large Allen Head Bolts	6 pcs
M.	Small Allen Head Bolts	4 pcs
N.	Large Flat Washers	8 pcs
O.	Small Flat Washers	6 pcs
P.	Nuts	6 pcs
Q.	Spanner	1 pc
R.	Large Allen Head Wrench	1 pc
S.	Small Allen Head Wrench	1 pc
T.	Phillips Head Screwdriver	1 pc


- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * Use the hardware illustrations to determine correct piece and size.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.




1883776

Queen St. Charles Bed


Hardware Illustrations




I. Phillips Head Screw

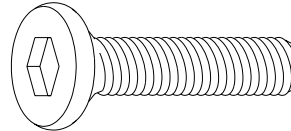


J. Med Allen Head Bolts

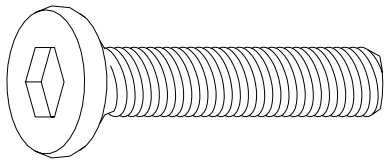


K. Allen Head Bolts (M8 x 32)

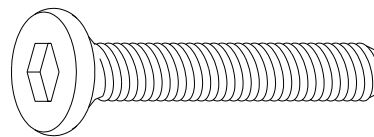


L. Large Allen Head Bolts

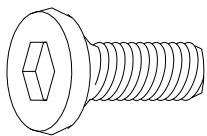


M. Small Allen Head Bolts



N. Large Flat Washer



O. Small Flat Washer

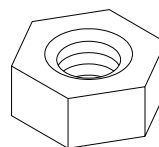

P. Nut



1883776

Queen St. Charles Bed

Attach Headboard & Footboard

Parts required

A.	Left Headboard Post	1 pc	I.	Phillips Head Screws	8 pcs
B.	Right Headboard Post	1 pc	J.	Med Allen Head Bolts	4 pcs
C.	Left Footboard Post	1 pc	S.	Small Allen Head Wrench	1 pc
D.	Right Footboard Post	1 pc	T.	Phillips Head Screwdriver	1 pc
E.	Metal Assemblies	2 pcs			

1. **Attach Headboard** Insert the stock ends of Metal Assemblies (E) into the pre-drilled holes in Left & Right Headboard Post (A, B). Make sure the welding side faces out. Align the pre-drilled holes in the metal brackets under stock ends of Metal Assemblies (E) with the pre-threaded holes in the Left & Right Headboard Posts (A, B). Secure in place with Med Allen Head Bolts (J) using Small Allen Head Wrench (S). **Do not tighten fully at this time.** Adjust the pre-drilled holes in the Metal Assemblies (E) to align with the pre-drilled holes in the Left & Right Headboard Posts (A, B). Secure with Phillips Head Screws (I) using Phillips Head Screwdriver (T). **Tighten all the bolts at this time.** See Illustration #1

2. Repeat Step 1 to attach footboard. But make sure the welding side faces inside (toward Headboard). See Illustration. #1

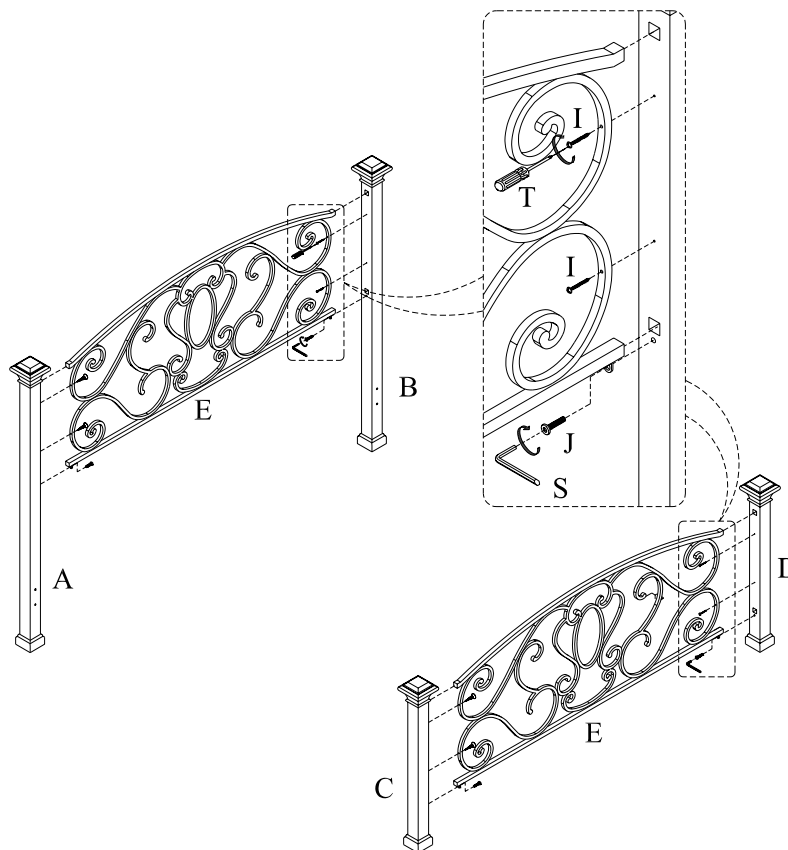


Illustration # 1



1883776

Queen St. Charles Bed

Attach Side Rails, Leg Supports & the Support Slats

Parts required

A.	Left Headboard Post	1 pc	K.	Allen Head Bolts (M8 x 32)	8 pcs
B.	Right Headboard Post	1 pc	M.	Small Allen Head Bolts	6 pcs
C.	Left Footboard Post	1 pc	N.	Large Flat Washer	8 pcs
D.	Right Footboard Post	1 pc	O.	Small Flat Washers	6 pc
F.	Side Rails	2 pcs	P.	Nuts	6 pcs
G.	Support Slats	3 pcs	Q.	Spanner	1 pc
H.	Leg Supports	3 pcs	R.	Large Allen Head Wrench	1 pc
L.	Lg Allen Head Bolts	6 pcs	S.	Small Allen Head Wrench	1 pc

3. **Attach Side Rails (F)** Align the pre-drilled holes in the ends of the Side Rails (F) with the pre-threaded holes in the Left & Right Headboard Posts (A, B). Secure with the Allen Head Bolts (M8 x 32) (K), Large Flat Washers (N) using the Large Allen Head Wrench (R). See Illustration #2.
4. Repeat step 3 to secure the Side Rails (F) to the Left & Right Footboard Posts (C, D). See Illustration #2.
5. **Attach the Leg Supports (H)** Insert the Leg Supports (H) into the short tubes on the Support Slats (G). Align the pre-threaded holes in the Leg Supports (H) with the pre-drilled holes in the short tubes. Secure in place with Small Allen Head Bolts (M) using the Small Allen Head Wrench (S). See Illustration #2
6. **Attach Support Slats (G)** Align the pre-drilled holes in the Support Slats (G) with the pre-drilled holes in the Side Rails (F). Make the tube on Support Slats (G) face up. Secure in place with the Large Allen Head Bolts (L), Small Flat Washers (O), and Nuts (P), using the Small Allen Head Wrench (S) and the Spanner (Q). See Illustration #2

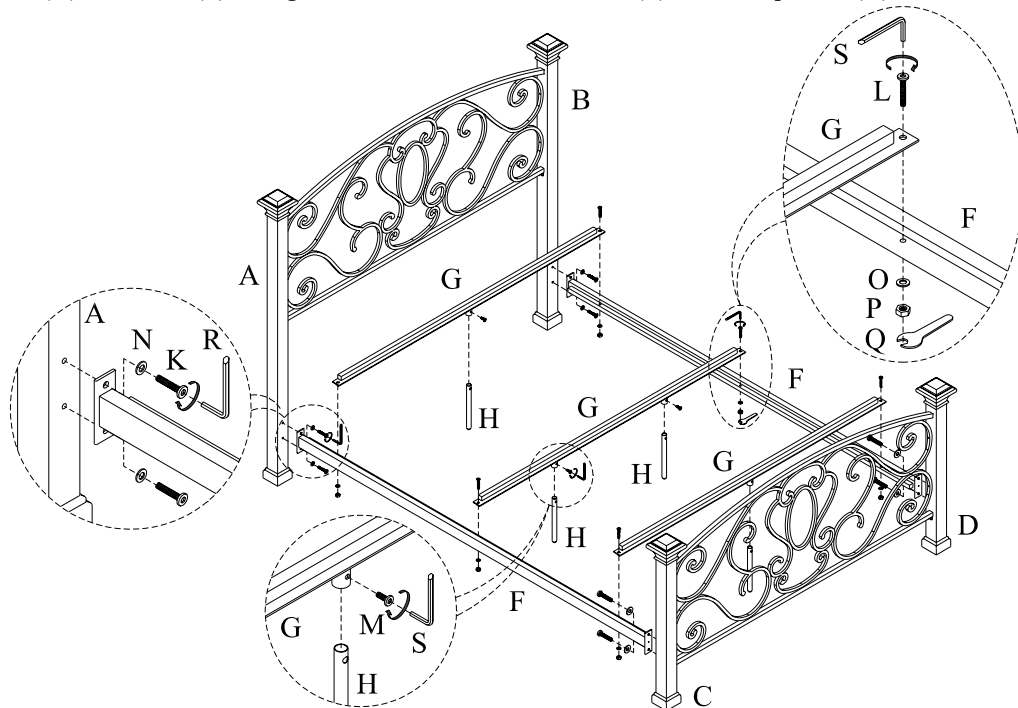


Illustration # 2